

# Double tank mounted return line filter with filter element according to DIN 24550

RE 51454

Edition: 2019-11 Replaced: 05.15

Type 10TDN0040... 1000; 10TD2000; 2500



- ▶ Size according to DIN 24550: 0040 to 1000
- ▶ additional sizes: 2000, 2500
- Component series 1X
- Nominal pressure 10 bar [145 psi]
- Connection up to 3"
- ➤ Operating temperature -10 °C to +100 °C [14 °F to 212 °F]

#### **Features**

The tank mounted return line filters are designed for installation on fluid tanks. Their function is to separate solid materials from fluids.

They distinguish themselves by the following:

- ▶ Filters for tank mounting, switchable
- ► Special highly efficient filter materials
- ► Filtration of very fine particles and high dirt holding capacity across a broad pressure differential range
- ▶ High collapse resistance of the filter elements
- ► Optionally equipped with mechanical optical maintenance indicator with memory function
- ► Optional equipment with various electrical switching elements, modular design
- By default, the filters are equipped with a bypass valve integrated in the filter housing
- Optional measuring port

### Contents

Features	1
Ordering code filter	2, 3
Preferred types	4
Ordering code accessories	5, 6
Filter design	7
Symbols	8
Function, section	ç
Technical data	10, 11
Compatibility with permitted hydraulic fluids	11
Dimensions	12 20
Ordering code spare parts	21 24
Assembly, commissioning, maintenance	25, 26
Tightening torques	27
Directives and standardization	28, 29
Environment and recycling	30
Intended use	30
Improper use	30

## Ordering code Filter

01	02	03		04		05	06		07		80		09		10
10TD			-	1X	/		A00	_		-				_	

01	Double tank mounted return line filter 10 bar [145 psi]	10TD
ilte	r element	
02	With filter element according to <b>DIN 24550</b> (only with frame size 0040-1000)	N
Size		
03	TDN	0040
	(filter element according to <b>DIN 24550</b> )	0063
		0100
		0160
		0250
		0400
		0630
		1000
	TD	2000
	(filter element according to Bosch Rexroth standard)	2500
04	Component series 10 19 (10 19: unchanged installation and connection dimensions)	1X
Filte	r rating in µm	
05	Nominal Paper, not cleanable	P10
		D25

Nominal	Paper, not cleanable	P10
		P25
Nominal	Stainless steel wire mesh, cleanable	G10
		G25
		G40
		G60
		G100
Absolute	Glass fiber material, not cleanable	PWR3
(ISO 16889; β <sub>x(c)</sub> ≥ 200)		PWR6
		PWR10
		PWR20
Absolute	Water absorbing, not cleanable	AS6
(ISO 16889; β <sub>x(c)</sub> ≥ 200)		AS10
		AS20

### Differential pressure

06	Max. admissible differential pressure of the filter element 30 bar [435 psi] (filter with bypass valve)	A00
----	---	-----

### Maintenance indicator (1 unit per filter side)

07	Without maintenance indicator - bypass cracking pressure 3.5 bar [51 psi]	0					
	Pressure gauge 1) 06 bar [087 psi] vis-à-vis inlet - bypass cracking pressure 3.5 bar [51 psi]	МВ					
	Maintenance indicator, cover-mounted, mechanical optical, switching pressure 2.2 bar [32 psi],  with additional pressure gauge 1) 06 bar [087 psi] vis-à-vis inlet - bypass cracking pressure 3.5 bar [51 psi]						
	Maintenance indicator, mech. optical, switching pressure 2.2 bar [32psi] - bypass cracking pressure 3.5 bar [51 psi]	P2,2					
	Maintenance indicator, mech. optical, switching pressure 0.8 bar [11.6 psi] - bypass cracking pressure 3.5 bar [51 psi]	V0,8					
	Maintenance indicator, mech. optical, switching pressure 1.5 bar [21.8 psi] - bypass cracking pressure 3.5 bar [51 psi]	V1,5					
	Maintenance indicator, mech. optical, switching pressure 2.2 bar [32psi] - bypass cracking pressure 3.5 bar [51 psi]	V2,2					

### Seal

<sup>1)</sup> If a pressure gauge is used, the maximum admissible operating pressure is reduced to 6 bar [87 psi].

## Ordering code Filter

01	02	03	04	05	06		07		80		09		10		10		10		10		10		10		10
10TD			- 1X /		A00	-		_		-		ı		-		-		1		-		-		-	

08	NBR seal	М
	FKM seal	V

### Connection

09	Frame size	0040.0400	04.00.0050	0400 0500	4000 0500		
	Connection	0040-0100	0160-0250	0400-0630	1000-2500		
	G1	•				R4	
	G1 1/4		X			R5	
	G1 1/2		•			R6	
	SAE 2 1/2" - 3000 psi			•		<b>S9</b>	
	SAE 3" - 3000 psi				•	S10	
	SAE 16"	Х					U9
	SAE 20"		X			U5	
		• standard conne	ction				
		X optional connec	ction possibility				

### Supplementary information (multiple specifications possible)

10	Breathing filter with oil mist separator (only NG0040-0100)	FN
	Additional threaded couplings, G1/4, vis-à-vis inlet (not in connection with pressure gauge)	М
	Installation plate (only NG0400-2500)	MP
	Without bypass valve	NB
	Outlet pipe L110 mm [4.33 inch] (only NG0040-0100, from NG0160 see chapter "Accessories")	R110
	Outlet pipe L150 mm [5.91 inch] (only NG0040-0100, from NG0160 see chapter "Accessories")	R150
	Outlet pipe L250 mm [9.84 inch] (only NG0040-0100, from NG0160 see chapter "Accessories")	R250

### Order example:

10TDN0040-1X/PWR10A00-P2,2-M-R4

Further versions are available upon request.

### **Preferred types**

### Filter rating 3 $\mu m,\, 6~\mu m,\, 10~\mu m$ and 20 $\mu m$

Filter Type	Flow in I/min [gpm] for $v = 30 \text{ mm}^2/\text{s} [142 \text{ SUS}]$ and $\Delta p = 0.5 \text{ bar } [7.25 \text{ psi}]^{-1}$	Connection	Material no.	Connection	Material no.
10TDN0040-1X/PWR3A00-P2,2-M	23 [6.1]	R4	R928051464	U9	R928051605
10TDN0063-1X/PWR3A00-P2,2-M	35 [9.2]	R4	R928051465	U9	R928051606
10TDN0100-1X/PWR3A00-P2,2-M	52 [13.7]	R4	R928051466	U9	R928051607
10TDN0160-1X/PWR3A00-P2,2-M	105 [27.7]	R6	R928051467	U5	R928051608
10TDN0250-1X/PWR3A00-P2,2-M	160 [42.3]	R6	R928051468	U5	R928051609
10TDN0400-1X/PWR3A00-P2,2-MMP	290 [76.6]	S9	R928051469		•
10TDN0630-1X/PWR3A00-P2,2-MMP	410 [108.3]	S9	R928051470		
10TDN1000-1X/PWR3A00-P2,2-MMP	560 [147.9]	S10	R928051471		
10TD2000-1X/PWR3A00-P2,2-MMP	900 [237.7]	S10	R928051472		
10TD2500-1X/PWR3A00-P2,2-MMP	1100 [290.6]	S10	R928051473		
10TDN0040-1X/PWR6A00-P2,2-M	37 [9.8]	R4	R928051395	U9	R928051600
10TDN0063-1X/PWR6A00-P2,2-M	49 [12.9]	R4	R928051396	U9	R928051601
10TDN0100-1X/PWR6A00-P2,2-M	70 [18.5]	R4	R928051397	U9	R928051602
10TDN0160-1X/PWR6A00-P2,2-M	150 [39.6]	R6	R928051398	U5	R928051603
10TDN0250-1X/PWR6A00-P2,2-M	200 [52.8]	R6	R928049477	U5	R928051604
10TDN0400-1X/PWR6A00-P2,2-MMP	410 [108.3]	S9	R928051399		
10TDN0630-1X/PWR6A00-P2,2-MMP	510 [134.7]	S9	R928051458		
10TDN1000-1X/PWR6A00-P2,2-MMP	870 [229.8]	S10	R928049321		
10TD2000-1X/PWR6A00-P2,2-MMP	1250 [330.1]	S10	R928051461		
10TD2500-1X/PWR6A00-P2,2-MMP	1350 [356.5]	S10	R928051463		
	T	1	1		1
10TDN0040-1X/PWR10A00-P2,2-M	43 [11.3]	R4	R928048600	U9	R928051613
10TDN0063-1X/PWR10A00-P2,2-M	62 [16.4]	R4	R928048601	U9	R928051614
10TDN0100-1X/PWR10A00-P2,2-M	80 [21.1]	R4	R928048602	U9	R928051615
10TDN0160-1X/PWR10A00-P2,2-M	190 [50.2]	R6	R928051508	U5	R928051616
10TDN0250-1X/PWR10A00-P2,2-M	260 [68.7]	R6	R928048604	U5	R928051617
10TDN0400-1X/PWR10A00-P2,2-MMP	460 [121.5]	S9	R928048991		
10TDN0630-1X/PWR10A00-P2,2-MMP	560 [147.9]	S9	R928051424		
10TDN1000-1X/PWR10A00-P2,2-MMP	970 [256.2]	S10	R928048992		
10TD2000-1X/PWR10A00-P2,2-MMP	1350 [356.6]	S10	R928048993		
10TD2500-1X/PWR10A00-P2,2-MMP	1450 [383.0]	S10	R928048994		
10TDN0040-1X/PWR20A00-P2,2-M	62 [16.4]	R4	R928051386	U9	R928051595
10TDN0063-1X/PWR20A00-P2,2-M	80 [21.1]	R4	R928051387	U9	R928051596
10TDN0100-1X/PWR20A00-P2,2-M	95 [25.1]	R4	R928048958	U9	R928051597
10TDN0160-1X/PWR20A00-P2,2-M	260 [68.7]	R6	R928051388	U5	R928051598
10TDN0250-1X/PWR20A00-P2,2-M	320 [84.5]	R6	R928051389	U5	R928051599
10TDN0400-1X/PWR20A00-P2,2-MMP	560 [147.9]	S9	R928051390		•
10TDN0630-1X/PWR20A00-P2,2-MMP	630 [166.4]	S9	R928051391		
10TDN1000-1X/PWR20A00-P2,2-MMP	1270 [335.5]	S10	R928051392		
10TD2000-1X/PWR20A00-P2,2-MMP	1600 [422.7]	S10	R928051393		
10TD2500-1X/PWR20A00-P2,2-MMP	1680 [443.8]	S10	R928051394		

<sup>1)</sup> An appropriate differential pressure via the filter and measuring device according to ISO 3968. The differential pressure measured on the maintenance indicator is lower.

### Ordering code Accessories

(dimensions in mm [inch])

### **Electronic switching element for maintenance indicators**

If an electronic switching element with signal suppression up to  $30^{\circ}\text{C}$  [ $86^{\circ}\text{F}$ ] is used (WE-2SPSU-M12X1, **R928028411**), it must be ensured that the aluminum version of the mechanical-optical maintenance indicator is used. In the filter type key, these maintenance indicators are referred to as "V0,8", "V1,5" or "V2,2".

In this connection, also refer to the chapter "Maintenance indicator".

The temperature-controlled signal processing does not work with mechanical-optical maintenance indicators made of polyamide, "P2,2".

01		02		03
WE	_		-	

#### Maintenance indicator

01	Electronic switching element	WE	

#### Type of signal

02	1 switching point	1SP
	2 switching points, 3 LED	2SP
	2 switching points, 3 LED and signal suppression up to 30 °C [ $86\%$ ]	2SPSU

#### Connector

(	03	Round plug-in connection M12x1, 4-pole	M12x1
		Rectangular connector, 2-pole, design A according to EN-175301-803, only possible with signal type "1SP"	EN175301-803

### Material numbers of the electronic switching elements

With the option "mechanical-optical maintenance indicator" (V..., P...), two mechanical-optical maintenance indicators are provided at the factory. Two electrical switching elements must therefore always be ordered as optional accessories.

Material no.	Туре	Signal	Switching points	Connector	LED	
R928028409	WE-1SP-M12x1	Changeover	1		Without	
R928028410	WE-2SP-M12x1	Normally open (at 75 %)/		M12x1		
R928028411	WE-2SPSU-M12x1	normally closed contact (at 100 %)	2		3 pieces	
R928036318	WE-1SP-EN175301-803	Normally closed contact	1	EN 175301-803	Without	

### Mating connectors (max. admissible voltage: 50 V)

for electronic switching element with round plug-in connection M12x1

Mating connector suitable for K24 4-pole, M12x1 with screw connection, cable gland Pg9.

### Material no. R900031155

Mating connector suitable for K24-3m 4-pole, M12x1 with potted-in PVC cable, 3 m long.

Line cross-section: 4 x 0,34 mm<sup>2</sup>

Core marking: 1 brown 2 white

3 blue 4 black

### Material no. R900064381

54 [2.12] 1 x 2 IIII 41,5 [1.63]

For more round plug-in connections and technical data refer to data sheet 08006.

### Ordering code Accessories

(dimensions in mm [inch])

### **Outlet pipe**

The outlet pipe is plugged onto the filter bowl outlet piece. Correct seat is confirmed by an audible click.

After plug-on, the outlet pipe can no longer be removed.


### Outlet pipe pluggable size 0040-0100


galvanized

Material no.	Description
R928038744	ACC-R-10TEN0040-0100-R110
R928038745	ACC-R-10TEN0040-0100-R150
R928038746	ACC-R-10TEN0040-0100-R250

### Outlet pipe with threaded connection from size 0160

### **Dimensions and range**

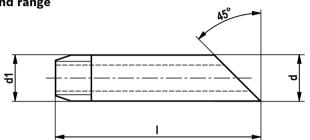



ES (stainless)

1) Recommended distance to tank bottom (unless specified otherwise): 60...160 mm [2.4...6.3 inch] From a pipe length of 400 mm [15.75 inch], we strongly recommend fixing the outlet pipe by means of a tank-internal pipe bracket.

					<b>0</b>	(
				Denomination: ROHR AB23-03/R	Denomination: ROHR AB23-03/RES	
DN		Dimensions				
DN	d	d1	l I	$\downarrow$	Material no.	Material no.
			250 [9.84]	1 1/2 L = 250	R900109501	R900062066
			400 [15.75]	1 1/2 L = 400	R900083146	R900074878
40 [1.57]	48.3 [1.90]	R 1 1/2	800 [31.50]	1 1/2 L = 800	R900029854	-
			1300 [51.18]	1 1/2 L = 1300	R900302230	-
			2000 [78.74]	1 1/2 L = 2000	R900229461	-
FO [1 07]	00 2 [2 27]	D 0	400 [15.75]	2 L = 400	R900727174	R900987657
50 [1.97]	60.3 [2.37]	R 2	800 [31.50]	2 L = 800	R900029856	R900226706
			160 [6.30]	3 L = 160	R900062845	_
			200 [7.87]	3 L = 200	R900061785	R900062067
80 [3.15]	88.9 [3.50]	R 3	350 [13.78]	3 L = 350	R900084137	-
			650 [25.59]	3 L = 650	R900076923	R900757513
			800 [31.50]	3 L = 800	R900029838	R900987653

Thread: Material/surface treatment:

Whitworth pipe thread according to DIN 2999 part 1, poppet 1:16 St 33-1 according to DIN 17100/galvanized (B) according to DIN 2444 1.4541

### Order example/search term

Pipe according to DIN 2440 (ISO 65) with thread R 1 1/2 and L = 250 mm [9.84 inch], galvanized:

PIPE AB23-03/R 1 1/2 L = 250 Material no. R900109501

### Filter design

Easy selection of the filter size is made possible by the FilterSelect online tool. The filter can be designed using the operating pressure, flow and fluid system parameters. The required filter rating is based on the application, the sensitivity to contamination of the components and the environmental conditions.


The program leads you through the menu on a step-by-step basis.

A documentation of the filter selection can finally be created in the form of a PDF file. This file contains the entered parameters, the designed filter with material number including spare parts, and the pressure loss curves.


#### Link FilterSelect:

http://filterselect.boschrexroth.com/rexfilter/

Other languages can be selected using the page navigation.

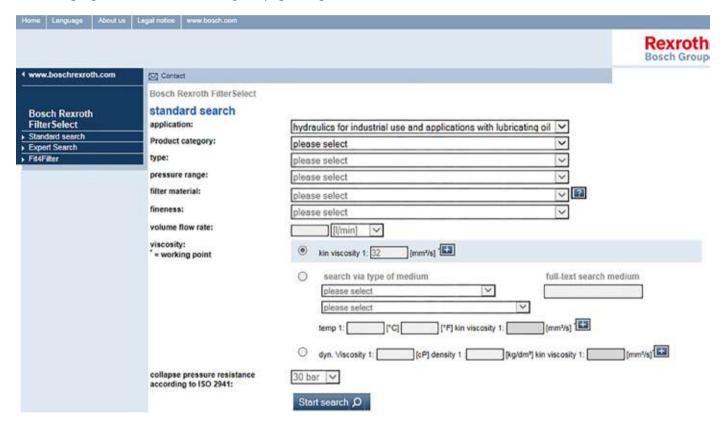

### **Symbols**

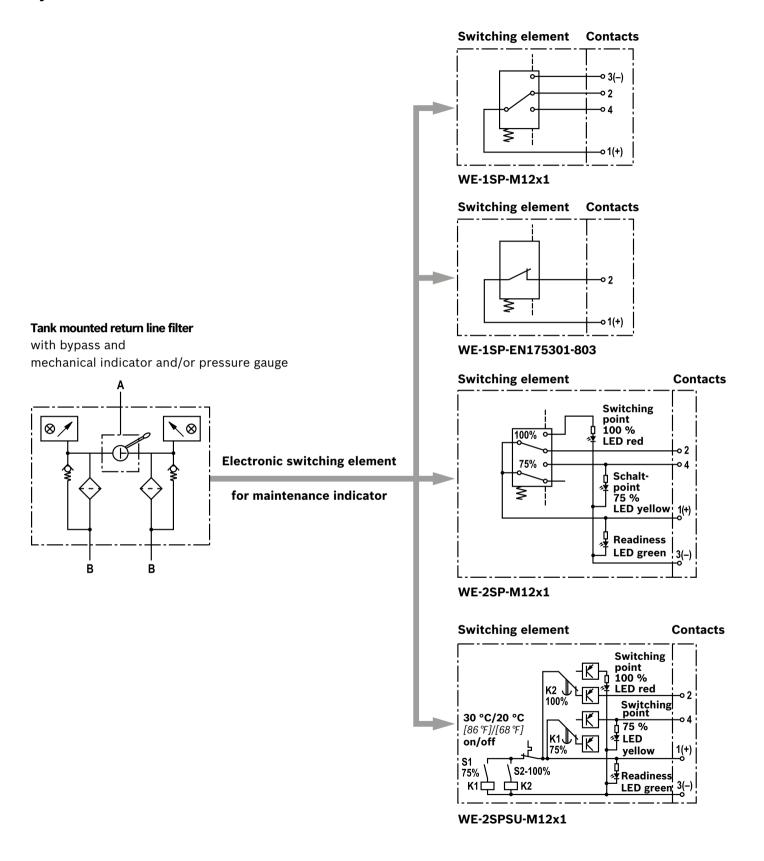

### **Function**, section


The switchable tank mounted return line filter is provided in the return line for direct attachment onto the tank of a hydraulic or lubrication system. It can also be used as filling or bypass filter. The filter basically consists of filter head (1) and switch-over fitting (2), filter bowl (3), cover (4), filter element (5) as well as a bypass valve (6), by default.

Optionally, the filter is equipped with mechanical optical maintenance indicator with memory function (7). For integration of the maintenance indicator into an electric circuit, the mechanical optical maintenance indicator may be amended by an electronic switching element. To this end, the electronic switching element (8) must be attached to the mechanical optical maintenance indicator (7) and held by means of a locking ring. The electronic switching elements are connected via a mating connector or a cable connection. The electronic switching element must be ordered separately. For every filter housing, a switching element is required.

Depending on the filter size, further additional functions are available – e.g. a breathing filter, surge protection (only for NG0040 - 0100) or outlet pipes in different lengths – in this connection, also refer to the chapter "Accessories".

During operation, the hydraulic fluid reaches the filter housing via the inlet; here, it flows through the filter element from the outside to the inside and is cleaned according to the filter rating. The dirt particles filtered out settle in the filter element. Via the outlet, the filtered hydraulic fluid enters the tank. In case of contamination, the necessary filter element change-out is displayed by the relevant maintenance indicator. Within the course of this exchange, you should also exchange the breathing filter element (only with NG NG0040-0100). To this end, the system is manually switched to the clean filter element by means of the switch-over fitting. Permanent flow is guaranteed during the switching process.

#### Type 10TDN0400-0630

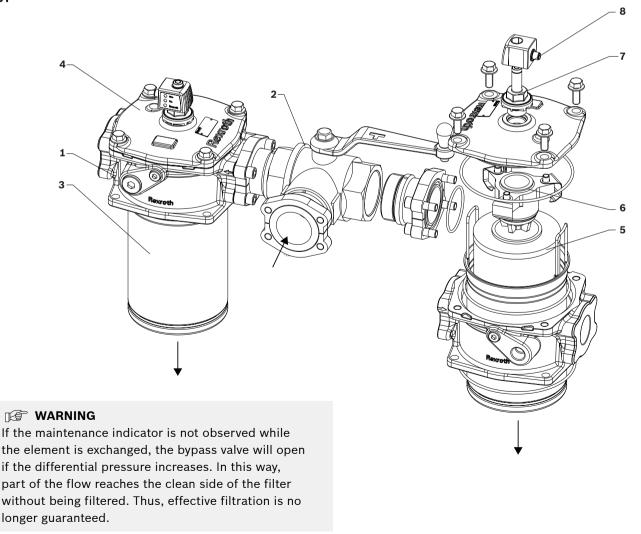

### **Technical data**

(For applications outside these values, please consult us!)

general									
Installation position			vertical						
Ambient temperature ran	ge	°C [°F]	-10+65 <i>[14+149]</i>						
Storage conditions	► NBR seal	°C [°F]	-40 +65 [-40 +149]; max. relative air humidity 65 %						
	► FKM seal	°C [°F]	-20 +65 <i>[</i> -	4 +149]; max	. relative air hu	umidity 65 %			
Weight		size	0040	0063	0100	0160	0250		
		kg [lbs]	4.46 [9.81]	4.86 [10.7]	5.26 [11.6]	14 [30.8]	15 [33]		
		size	0400	0630	1000	2000	2500		
		kg [lbs]	23 [50.6]	27 [59.4]	61 [134.2]	68 [149,9]	79 [174.1]		
Material	► Filter cover			reinforced pla ze 01602500	stic (size 0040 ))	)0100)			
	► Filter head		Aluminum						
	► Filter bowl			reinforced pla zed (size 0400	stic (size 0040 2500)	)0250)			
	► Optical mainte-	(P2,2)	Plastic PA6						
	nance indicator	(V)	Aluminum						
	► Bypass valve		Plastic, Alum	inum (size 100	00 2500)				
	► Electronic switchin	ng element	Plastic PA6						
	► Pressure gauge		Plastic						
	► Seals		NBR / FKM						
Surface requirement	► Roughness depth	R <sub>z max.</sub> μm	25 (10TDN0040-0100) and 6.3 16 (from 10TDN0160)						
for tank opening	► Flatness	t <sub>E max.</sub> mm [inch]	,						
hydraulic									
Max. operating pressure		bar [psi]			the maximum ted to 6 bar [8]				
Hydraulic fluid temperatu	ire range	°C [°F]	-10+100 [+14+212]						
Fatigue strength accordin	ng to ISO 10771 <sup>1)</sup>	Load cycles							
Type of pressure measure maintenance indicator	ement of the		Back pressur	е					
Assignment: response pre indicator / cracking press				e pressure of t nance indicato		racking pressu bypass va			
		bar [psi]	without ma	intenance indi	cator				
			with p	ressure gauge					
			V0.8 ± 0	0.15 [11.6 ± 2.2 <sub>]</sub>	1	2 5 1 0 25 (50	0,511		
			V1.5 ± 0	0.2 [21.8 ± 2.9]		3.5 ± 0.35 [50	.o ±3.1]		
			V2.2 ± 0	0.3 [31.9 ± 4.4]					
			P2.2 +0.45/-	0.25 [31.9(+6.4	/-3.6)]				
Filtration direction			From the out	side to the ins	ide				

 $<sup>^{1)}\,</sup>$  The service life of the components is e.g. influenced by:

The technical specifications apply complying with the specified performance limits. Extended operational resistance/load change upon request.

<sup>►</sup> The individual load frequency of the application

<sup>▶</sup> The actually occuring pressure increase rate

### **Technical data**

(For applications outside these values, please consult us!)

electric (electronic switching element)							
Electrical connection	Round plu	Standard connection EN 175301-803					
Version			WE1SP- M12x1	WE2SP- M12x1	WE2SPSU- M12x1	WE1SP- EN175301-803	
Contact load, direct voltage		A <sub>max</sub> .	1				
Voltage range		V <sub>max</sub> .	150 (AC/DC)	10-	30 (DC)	250 (AC)/200 (DC)	
Max. switching power with resistive load		W		20		70	
Switching type	▶ 75 % signal		-	Normally	open contact	-	
	▶ 100 % signal		Changeover	Normally (	closed contact	Normally closed contact	
	▶ 2SPSU				Signal interconnection at 30 °C [86 °F], return switching at 20 °C [68 °F]		
Display via LEDs				Stand-by	(LED green);		
in the electronic switching element 2SP				_	point (LED yellow) ng point (LED red)		
Protection class according to EN 60529 IF	<sup>2</sup> 65		IP 67			IP 65	
Ambient temperature range		°C [°F]	7 –25+85 [ <i>-</i> 13 <i>+</i> 185]				
For direct voltage above 24 V, spark exting	guishing is to be pro	ovided in	order to protec	t the switching	contacts.		
Weight		kg [lbs]	0.1 [0.22]				
Filter element							
Glass fiber paper PWR			Single-use ele	ment on the ba	sis of inorganic fibe	r	
			ISO	atio according t O 16889 - 5 bar <i>[72.5 psi]</i>	class	le oil cleanliness according to 5 (SAE-AS 4059)	
Particle separation		PWR3	$\beta_{5(c)} \ge 200$	$\beta_{6(c)} \ge 100$	00 13/10/	/8 17/13/10	
	_	PWR6	$\beta_{7(c)} \ge 200$	$\beta_{8(c)} \ge 100$	00 15/12/2	10 19/14/11	
	_	PWR10	$\beta_{10(c)} \ge 200$	$\beta_{11(c)} \ge 10$	00 17/14/	10 21/16/13	
		PWR20	$\beta_{20(c)} \ge 200$	$\beta_{21(c)} \ge 10$	00 19/16/2	12 22/17/14	
Admissible pressure differential E00	► A00	bar [psi]	30 [435]				

Further information on the characteristic values and filter media is available in data sheet 51548.


### Compatibility with permitted hydraulic fluids

Hydraulic fluid  Mineral oil		Classification	Suitable sealing materials	Standards DIN 51524	
		HLP	NBR		
Bio-degradable	► Insoluble in water	HETG	NBR	VDMA 24568	
		HEES	FKM	VDIVIA 24508	
	► Soluble in water	HEPG	FKM	VDMA 24568	
Flame-resistant	► Water-free	HFDU, HFDR	FKM	VDMA 24317	
	► Containing water	HFAS	NBR	DIN 04000	
		HFAE	NBR	DIN 24320	
		HFC	NBR	VDMA 24317	

### Important information on hydraulic fluids:

- ► For further information and data on the use of other hydraulic fluids, please refer to data sheet 90220 or contact us!
- ► Flame-resistant containing water: Due to possible chemical reactions with materials or surface coatings of machine and system components, the service life with these hydraulic fluids may be less than expected. Filter materials made of
- filter paper (cellulose) must not be used, filter elements with glass fiber material (Pure Power PWR... or wire mesh G) must be used instead.
- ▶ Bio-degradable: If filter materials made of filter paper are used, the filter life may be shorter than expected due to material incompatibility and swelling.

### Dimensions: 10TDN0040, 0063, 0100

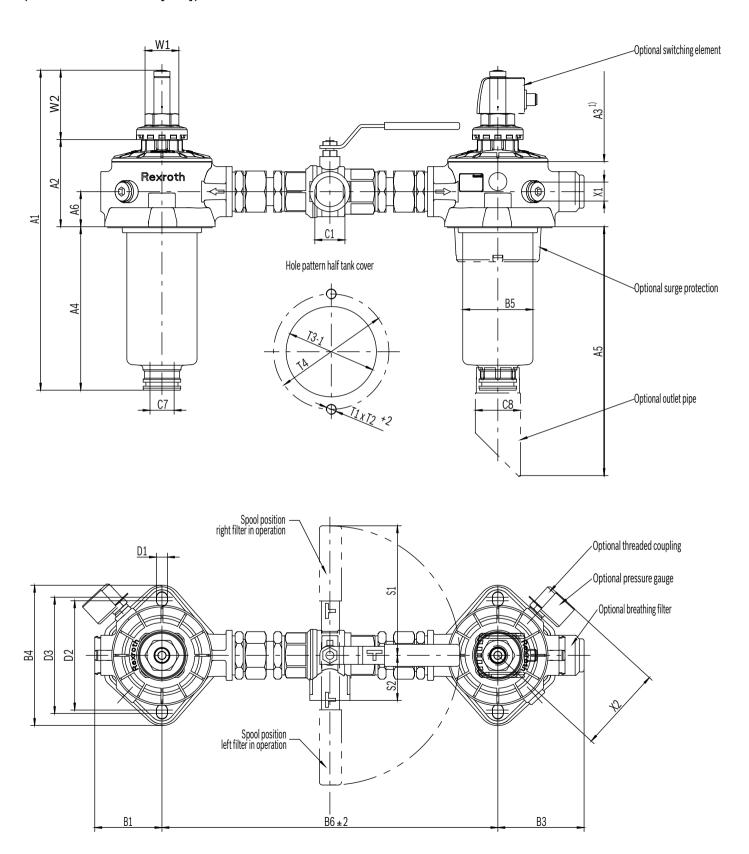

### Dimensions: 10TDN0040, 0063, 0100


Туре	A1	A2	<b>A3</b> 1)	A4	_	.5	A6	B1	В3	B4	Ø B5	В	6 ±2 [±0.079]	
туре		AZ	A3 -/				AU	D1	D3	D-4	Ø 55	Standard	U (SAE J1926)	
					R110	190 [7.48]								
10TDN0040	259 [10.2]		100 [3.94]	103 [4.06]	R150	230 [9.06]								
					R250	330 [13]								
		12.6] [3.43] [6				R110	250 [9.84]							
10TDN0063					R150	290 [11.4]	35 [1.38]	67 [2.64]	86 [3.39]	140 [5.51]	70 [2.76]	335 [13.2]	351 [13.8]	
					R250	390 [15.4]								
					R110	340 [13.4]								
10TDN0100	409 [16.1]			253 [9.96]	R150	380 [15]								
					R250	480 [18.9]								


Туре	C1		C7 9	ø cs	D1	D2	D3	3 S1	<b>S2</b>		
	Standard	U (SAE J1926)	C7	9 C8	D1	D2	D3	51	Standard	U (SAE J1926)	
10TDN0040											
10TDN0063	G1	SAE 16 1 5/16-12 UN-2B	2B NW 25	45 [1.77]	11 [0.43]	109 [4.29]	116 [4.57]	129.5 [5.1]	45 [1.77]	47.5 [1.87]	
10TDN0100		1 3/10 12 31 25		[1.77]	[0.40]	[4.20]	[4.07]	[0.1]	[1.77]	[1.07]	

Туре	T1	T2 +2 [+0.079]	Ø T3 <sub>-1 [-0.039]</sub>	Ø T4	W1	W2	X1	X2	Х3
10TDN0040									
10TDN0063	M10	[0.47]	90 [3.54]	115 [4.53]	SW30	69 [2.72]	G 1/4	85 [3.35]	85 [3.35]
10TDN0100		[5.47]	[5.54]	[ 1.50]		[2.72]		[5.00]	[5.50]

 $<sup>^{1)}</sup>$  Observe the servicing height plus the length of the outlet pipe, if applicable

### **Dimensions: 10TDN0160, 0250**

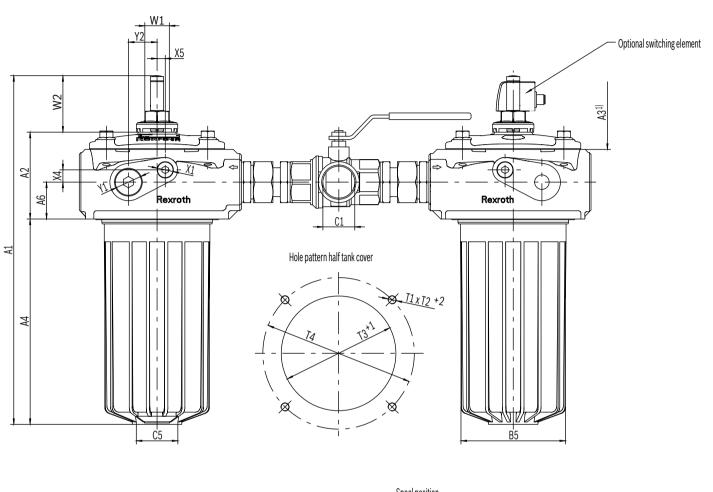

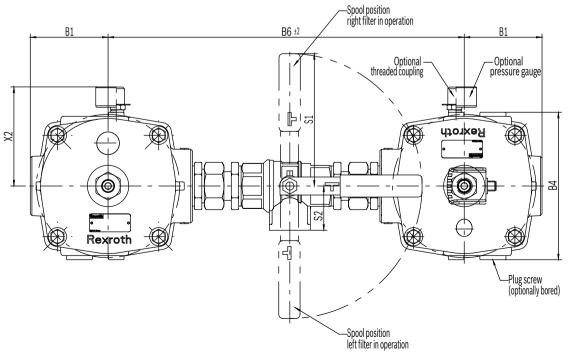

### **Dimensions: 10TDN0160, 0250**

Туре	A1	A2	A3 <sup>1)</sup>	A4	A6	B1	В4	B5
10TDN0160	336 [13.2]	106 [4 17]	160 [6.3]	161 [6.34]	A5 [1 77]	05 [2 74]	100 [7 00]	120 [5 00]
10TDN0250	426 [16.8]	106 [4.17]	250 [9.84]	251 [9.88]	45 [1.77]	95 [3.74]	180 [7.09]	129 [5.08]


-		B6 ±2 [±0.079]			C1		
Type	Standard	lard Optional		Standard Optional			C5
	G1 1/2	G1 1/4	U (SAE J1926)			U (SAE J1926)	
10TDN0160	4EC [10]	42E [17.1]	44E [17 E]	C1 1/2	01.1/4	1.5/0.10 UN 20	0.1.1/0
10TDN0250	456 [18]	435 [17.1]	445 [17.5]	G1 1/2	G1 1/4	1 5/8-12 UN-2B	G 1 1/2

		S1		S2			
Type	Standard	Opti	onal	Standard	Opti	onal	
	G1 1/2	G1 1/4 U (SAE J1		G1 1/2	G1 1/4	U (SAE J1926)	
10TDN0160	150 [6 26]	162 [6.38]	172 [6 91]	60 [2 26]	EA [2.12]	56 [2.2]	
10TDN0250	159 [6.26]	162 [6.36]	173 [6.81]	60 [2.36]	54 [2.13]	56 [2.2]	

Туре	T1	T2 +2 [+0.079]	Ø T3 . <sub>1 [-0.039]</sub>	Ø T4	W1	W2	X1	X2	ХЗ	Х4	X5	Y1	Y2	Y3
10TDN0160	M10	12	140	185	SW30	69	G 1/4	117	115	15	10	G 3/4	35	90
10TDN0250	M10	[0.47]	[5.51]	[7.28]	50030	[2.72]	G 1/4	[4.61]	[4.53]	[0.59]	[0.39]	G 3/4	[1.38]	[3.54]

 $<sup>^{1)}</sup>$  Observe the servicing height plus the length of the outlet pipe, if applicable

### **Dimensions: 10TDN0400, 0630**

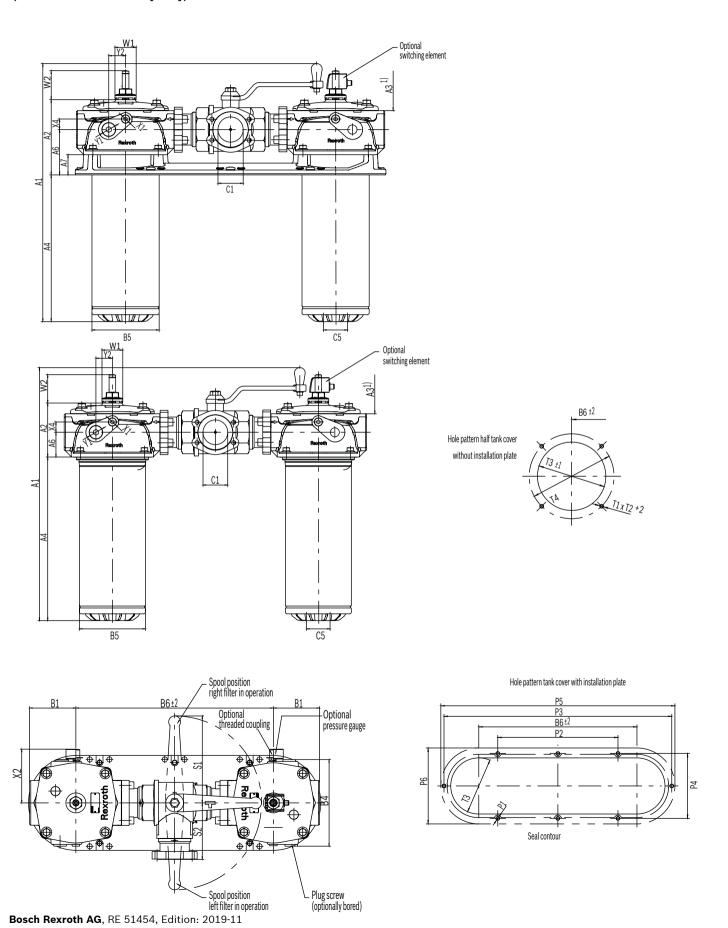

### **Dimensions: 10TDN0400, 0630**

Туре	A1	A2		A3 <sup>1)</sup>	A4		Δ	A7		
Type A1		with MP	without MP	A3 -/	with MP	without MP	with MP	without MP	Α/	
10TDN0400	464 [18.3]	179 [7.05]	101 [[ 10]	335 [13.2]	199 [7.83]	247 [9.72]	108 [4.25]	60 [2 26]	40 [1 00]	
10TDN0630	614 [24.2]	1/9[/.05]	131 [5.16]	485 [19.1]	349 [13.7]		106 [4.25]	60 [2.36]	48 [1.89]	


Туре	B1	B4	B4 Ø B5 B6 ±2 [±0.079]		C1	C5
10TDN0400	117 [4.61]	215 [0.46]	100 [6 3]	500 [19.7]	SAE 2 1/2"	6.2
10TDN0630	117 [4.01]	215 [8.46] 160 [6.3]		500 [19.7]	SAE 2 1/2	G 2


Туре	P1	P2	Р3	P4	P5	P6	S1	S2
10TDN0400	M10	380 [15]	720 [28.3]	205 [8.07]	720 [28.3]	238 [9.37]	220 [8.66]	143 [5.63]
10TDN0630	IVIIO	360 [15]	[ 720 [26.3]	205 [8.07]	[ 720 [26.3]	236 [9.37]	220 [8.00]	143 [5.63]

Туре	T1	T2 +2 [+0.079]	Ø T3 . <sub>1 [-0.039]</sub>	Ø T4	W1	W2	X1	X2	ХЗ	X4	Y1	Y2	Y3
10TDN0400	M10	12	178	220	CW20	69	C 1/4	135	134	25	0.2/4	40	109.5
10TDN0630	M10	[0.47]	[7.01]	[8.66]	SW30	[2.72]	G 1/4	[5.31]	[5.28]	[0.98]	G 3/4	[1.57]	[4.31]


 $<sup>^{1)}\,</sup>$  Observe the servicing height plus the length of the outlet pipe, if applicable


### Dimensions: 10TDN1000, 10TD2000, 10TD2500

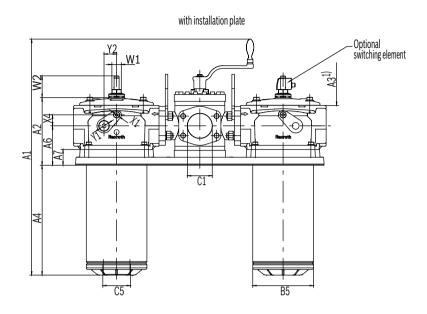

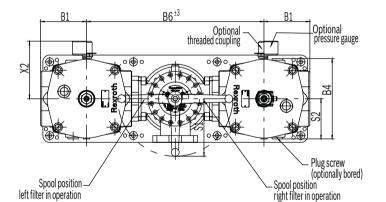


Hole pattern tank cover with installation plate

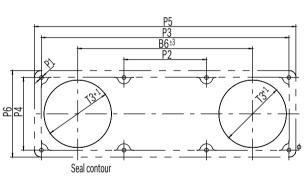

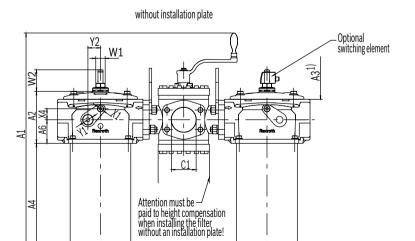

Hole pattern half tank cover without installation plate

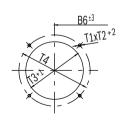

## **Dimensions: 10TDN1000, 10TD2000, 10TD2500** (dimensions in mm [inch])

Type	A1 A2		A2 A3 <sup>1</sup>		A4		Δ	.6	A7
Type	AI	with MP	without MP		with MP	without MP	with MP	without MP	Ai
10TDN1000	751 [29.6]			530 [20.9]	349,5 [13.8]	400 [15.7]		75 [2.95]	
10TD2000	1109 [43.7]	215.5 [8.48]	165 [6.5]	880 [34.6]	707,5 [27.9]	758 [29.8]	125.5 [4.94]		50.5 [1.99]
10TD2500	1344 [52.9]			1130 [44.5]	942,5 [37.1]	993 [39.1]			

Type 10TDN	B1	B4	Ø B5	B6 ±3 [±0.118]	C1	C5
10TDN1000						
10TD2000	137 [5.39]	260 [10.2]	193 [7.6]	530 [20.9]	SAE 3" 3000psi	G 3
10TD2500					3000p3i	

Type 10TDN	ØP1	P2	Р3	P4	P5	P6	S1	S2
10TDN1000								
10TD2000	11.5 [0.45]	250 [9.84]	750 [29.5]	220 [8.66]	792 [31.2]	262 [10.3]	168 [6.61]	130 [5.12]
10TD2500								


Type 10TDN	T1	T2 +2 [+0.079]	Ø T3 . <sub>1 [-0.039]</sub>	Ø T4	W1	W2	X1	Х3	X4	Y1	Y2	
10TDN1000	M10											
10TD2000		M10 12 [0.47]	202 [7.95]	250 [9.84]	SW 30	69 [2.72]	G 1/4	145,8 [5.74]	35 [1.38]	G 3/4	40 [1.57]	
10TD2500		[0.47]	[7.50]	[0.04]		[2.72]		[0.74]	[1.00]		[1.07]	

 $<sup>^{1)}</sup>$  Observe the servicing height plus the length of the outlet pipe, if applicable


### **Dimensions: maintenance indicator**

(dimensions in mm [inch])

### Electronic switching element with round plug-in connection M12x1, 4-pins

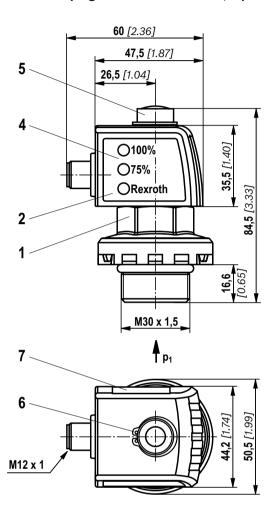

## Electronic switching element with rectangular connector EN 175301-803

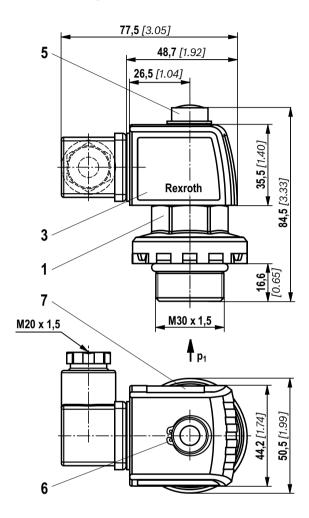

- 1 Mechanical optical maintenance indicator; max. tightening torque  $M_{\text{A max}}$  = 50 Nm [36.88 lb-ft] tightening torque for back pressure indicator in PA6.6  $M_{\text{A max}}$  = 35 Nm [25.82 lb-ft]
- 2 Switching element with locking ring for electrical maintenance indicator (rotatable by 360°); plug-in connection M12x1, 4-pole
- 3 Switching element with locking ring for electrical maintenance indicator (rotatable by 360°); plug-in connection EN175301-803
- 4 Housing with three LEDs: 24 V =

green: stand-by

yellow: switching point 75 % red: switching point 100 %

- 5 Optical indicator, self-holding receiptable
- 6 Locking ring DIN 471-16x1, material no. **R900003923**
- 7 Name plate

### M Notices:

If an electronic switching element with signal suppression up to 30 °C [ $86\,^\circ$ F] is used (WE-2SPSU-M12X1, **R928028411**), it must be ensured that the aluminum version of the mechanical-optical maintenance indicator is used. In the filter type key, these maintenance indicators are referred to as "V2,2", "V1,5" or "V0,8".

In this connection, also refer to the chapter "Spare parts and Accessories".

The temperature-controlled signal processing does not work with mechanical-optical maintenance indicators made of polyamide.

## Ordering code Spare parts

### Filter element

01	02	03		04		05		06
1.			1	A00	-	0	1	

01	Design		1.
Size			
02	TDN		0040
	(filter element according	to DIN 24550)	0063
	,	,	0100
			0160
			0250
			0400
			0630
			1000
	TD		2000
	(filter element according	g to Bosch Rexroth standard)	2500
ilte	rating in µm		'
03	Nominal	Paper, not cleanable	P10
			P25
	Nominal	Stainless steel wire mesh, cleanable	G10
			G25
			G40
			G60
			G100
	Absolute	Glass fiber material, not cleanable	PWR3
	(ISO 16889); β <sub>x(c)</sub> ≥ 200		PWR6
			PWR10
			PWR20
	Absolute	Water absorbing, not cleanable	AS6
	(ISO 16889; β <sub>x(c)</sub> ≥ 200)		AS10
	, , , , , ,		AS20
Diffe	rential pressure		,
04	Max. admissible differen	tial pressure of the filter element 30 bar [435 psi] (filter <b>with</b> bypass valve)	A00
Зура	ss valve		
05	Without bypass valve		0
Seal			•
06	NBR seal		М
	FKM seal		V

### Order example:

### 1.0040 PWR10-A00-0-M

Other versions available upon request.

For further information on Rexroth filter elements, please refer to data sheet 51515.

## Ordering code Spare parts

### Filter element

## Preferred program Replacement elements

	Filter material/material no.						
Filter element Type	PWR3	PWR6	PWR10	PWR20			
1.0040A00-0-M	R928005835	R928005836	R928005837	R928005838			
1.0063A00-0-M	R928005853	R928005854	R928005855	R928005856			
1.0100A00-0-M	R928005871	R928005872	R928005873	R928005874			
1.0160A00-0-M	R928005889	R928005890	R928005891	R928005892			
1.0250A00-0-M	R928005925	R928005926	R928005927	R928005928			
1.0400A00-0-M	R928005961	R928005962	R928005963	R928005964			
1.0630A00-0-M	R928005997	R928005998	R928005999	R928006000			
1.1000A00-0-M	R928006033	R928006034	R928006035	R928006036			
1.2000A00-0-M	R928041312	R928048158	R928040797	R928041313			
1.2500A00-0-M	R928041314	R928046806	R928040800	R928041315			

without information

## Ordering code Spare parts

### Mechanical optical maintenance indicator

01	02		03		04		05		06	07
W	0	-	S01	-		-		•	10	

01	Maintenance indicator	W
02	Mechanical optical indicator	0
/ersi	on	
03	Back pressure M30x1,5	S01
Switc	hing pressure	
04	0.8 bar [12 psi] (not possible for plastic variant)	0,8
	1.5 bar [22 psi] (not possible for plastic variant)	1,5
	2.2 bar [32 psi]	2,2
Seal		
05	NBR seal	М
	FKM seal	V
Max.	operating pressure	
06	10 bar [145 psi]	10
lous	ng material	•
07	Plastic 2.2 bar [32 psi] only possible	PA

### Mechanical optical maintenance indicator

Material no.	Description
R928038773	WO-S01-0,8-M-10
R928038772	WO-S01-0,8-V-10
R928038776	WO-S01-1,5-M-10
R928038774	WO-S01-1,5-V-10
R901025310	WO-S01-2,2-M-10
R901066232	WO-S01-2,2-V-10
R928038771	WO-S01-2,2-M-10-PA
R928038769	WO-S01-2,2-V-10-PA

### Pressure gauge 1)

Aluminum


Material no.	Description				
R928019224	M010 0-6 bar [0-87psi], fluid connection R 1/4, Ø50 mm				

<sup>1)</sup> If a pressure gauge is used, the maximum admissible operating pressure is reduced to 6 bar [87 psi].

### **Breathing filter element**

(only for 10TDN0040-0100) incl. plastic cap

Material no.	Description				
R928019705	71.001 P5-S00-0-0				

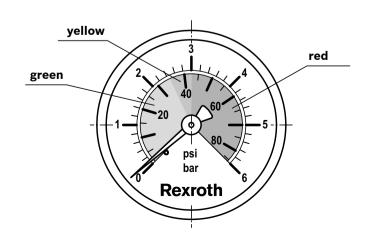

## Ordering code Spare parts

### Seal kit

01	02	03		04			05		06
D	10TD		-	1X	/	•		-	

_							
01	Seal kit	D					
02	Series	10TD					
Size							
03	03   0040-0100						
	0160-0250 <b>N0160-0250</b>						
	0400-0630	N0400-063					
	1000	N1000					
	2000-2500	2000-2500					
04	Component series 10 19 (10 19: unchanged installation and connection dimensions)	1X					
Seal							
05	NBR seal	М					
	FKM seal	V					
Supp	elementary information						
06	Breathing filter with oil mist separator (only NG0040-0100)	FN					
$\overline{}$	<u> </u>						

### Seal kit

Material no.	Description
R928051474	D10TDN0040-0100-1X/-M
R928051475	D10TDN0160-0250-1X/-M
R928051476	D10TDN0400-0630-1X/-M
R928051478	D10TDN1000-1X/-M
R928051479	D10TD2000-2500-1X/-M
R928051993	D10TDN0040-0100-1X/-V
R928051994	D10TDN0160-0250-1X/-V
R928051995	D10TDN0400-0630-1X/-V
R928051996	D10TDN1000-1X/-V
R928051997	D10TD2000-2500-1X/-V
R928053141	D10TDN0040-0100-1X/-M-FN
R928053142	D10TDN0040-0100-1X/-V-FN

### Threaded coupling

Material no.	Description	Seal
R900009090	MCS20-SDS-E-G1/4-ST3N00Z-M	NBR
R900001264	MCS20-SDS-E-G1/4-ST3F00Z-M	FKM

### Assembly, commissioning, maintenance

#### Assembly

The max. operating pressure of the system must not exceed the max. adm. operating pressure of the filter (see name plate).

#### Mer Notice:

If a pressure gauge is used, the maximum admissible operating pressure is reduced to 6 bar [87 psi]. For frame sizes 1000 - 2500 without adapter plate, a height compensation of 50 mm must be taken into account.

Before the assembly, the hole pattern of the tank must be compared to the dimensions from the chapter "Dimensions".

We urgently recommend leading drain pipes as of a length of approx. 400 mm in a bracket in order to avoid oscillations caused by the fluid flow in the tank. It is moreover to be ensured that in case of maintenance works, the filter bowl and the outlet pipe are pulled out of the filter head together.

During assembly of the filter (see also chapter "Tightening torques"), the flow direction (direction arrows) and the required servicing height of the filter element (see chapter "Dimensions") are to be considered. With frame sizes 1000 - 2500, the lifting eyes can be used as assembly aid.

Perfect functioning is only guaranteed in the installation position filter bowl vertically downwards and ON the tank. The maintenance indicator must be arranged in a well visible way.

Remove the plastic plugs in the filter inlet and outlet. Ensure that the system is assembled without tension stress.

The optional electronic maintenance indicator is connected via the electronic switching element with 1 or 2 switching points, which is attached to the mechanical optical maintenance indicator and held in place by means of the locking ring.

### Commissioning

Commission the system.

Switch the filter into the operating position; to do so, switch the switching lever to one of the two end positions. The filter side that is currently flown-through can be seen from the switching symbol at the switch-over.

### Mer Notice:

There is no bleeding provided at the filter.

Caution: Risk of burning!

When working on the filter, e.g. when replacing filter elements and cleaning, pay attention to possibly hot operating fluid. The safety instructions of the machine end-user are to be observed.

#### Maintenance

- ▶ If at operating temperature, the red indicator pin extends out of the mechanical optical maintenance indicator and/or if the electronic switching element opens / closes the circuit, the filter element is contaminated and needs to be replaced and cleaned respectively.
- ► The material number of the corresponding replacement filter element is indicated on the name plate of the complete filter assembly. It must comply with the material number on the filter element.
- Switch the switching lever to the opposite end position in order to switch to the clean filter side. Observe the switching symbol on the switching lever and/or the switch-over.
- Screw off the filter cover and/or loosen the screws and remove the filter over upwards.

### Notice:

Note that with lower ratings, it may take slightly longer to discharge the residual oil. If there is still residual oil in the filter bowl, the fluid has to be collected in a separate tank.

- Remove the filter element together with the filter bowl. From frame size 0160, the filter bowls are equipped with removal brackets.
- ► Remove the filter element from the spigot in the filter bowl by rotating it slightly.
- ▶ Clean the filter components, if necessary.
- Check the seals at filter cover and filter bowl for damage and replace them, if necessary.
  For suitable seal kits refer to chapter "Spare parts".
- ► Filter elements made of wire mesh can be cleaned. For detailed cleaning instructions refer to data sheet "Filter elements"
- Install the new or cleaned filter element on the spigot again by slightly rotating it.
- ▶ The filter is to be assembled in reverse order.
- ► The torque specifications ("Tightening torques" chapter) are to be observed.
- During the filter element change-out, the breathing filter element should be exchanged manually (only with NG 0040-0100)

### Assembly, commissioning, maintenance

### **WARNING!**

- ► Assembly and disassembly only with depressurized system! For the filter element change-out refer to "Maintenance".
- ► Filter is under pressure!
- ▶ Only remove the filter cover when it is depressurized!
- ► Do not operate the switching lever during the filter element change-out.
- ► Do not exchange the maintenance indicator while the filter is under pressure!
- ► If the flow direction is not considered during the assembly, the filter element will be destroyed. Particles will get into the system and damage downstream components.
- ► When disassembling the filter, it must be ensured that the system is depressurized.

#### Notices:

- ► Work on the filter may only be carried out by trained specialists.
- Functioning and safety are only guaranteed if original Bosch Rexroth filter elements and spare parts are used.
- ▶ Warranty expires in the event that the delivered item is changed by the ordering party or third parties or improperly mounted, installed, maintained, repaired, used or exposed to environmental conditions that do not comply with the installation conditions.

### **Tightening torques**

### Tank mounting without installation plate

Series 10TD		N0040	N0063	N0100	N0160	N0250	N0400	N0630	N1000	2000	2500
Tank mounting screw	·		M10 x 30			M10	x 25			M12 x 25	
Quantity			4					8			
Recommended property class of screw						8	.8				
Tightening torque with $\mu_{total} = 0.14$	Nm [lb-ft]			21 ±	10 % [16 ±	10%]			37 ±	10 % [27 ±	10%]

### Tank mounting with installation plate

Series 10TD	N0040	N0063	N0100	N0160	N0250	N0400	N0630	N1000	2000	2500
Installation plate screw (hexagon socket head cap screw)			-			M10	x 20		M10 x 25	
Quantity			_					8		
Recommended property class of screw			_					8.8		
Tightening torque with $\mu_{total} = 0.14$ Nm [lb-ft]			_				21 ±	10 % [16 ±	10 %]	

### Filter cover

Series 10TD		N0040	N0063	N0100	N0160	N0250	N0400	N0630	N1000	2000	2500
Filter cover screw			_		М	10			M12		
Quantity	·		_					4			
Recommended property class of screw			_					8.8			
Tightening torque with $\mu_{total} = 0.14$	Nm [lb-ft]	3	ially to the 30 ± 10 % [ 22 ± 10 %]	1)		10 % 10 %]		37 ±	10 % [27 ±	10 %]	

### Maintenance indicator

Series 10TD		N0040	N0063	N0100	N0160	N0250	N0400	N0630	N1000	2000	2500
Maintenance indicator, mechanical optical, aluminum, V	Nm [lb-ft]					max. §	50 [37]				
Maintenance indicator, mechanical optical, PA, P2,2	Nm [lb-ft]					35 ± 3 [	[26 ± 3 %]				
Cubic connector screw switching element EN-175301-803	Nm [lb-ft]					M3/0.	5 [0.4]				

<sup>1)</sup> Re-tighten using an open-end wrench (SW41), if necessary

### **Directives and standardization**

#### **Product validation**

Rexroth filters, the filter elements built into them and filter accessories are tested and quality-monitored according to different ISO test standards:

Pressure pulse test	ISO 10771:2015-08
Filtration performance test (multipass test)	ISO 16889:2008-06
$\Delta p$ (pressure loss) characteristic curves	ISO 3968:2001-12
Compatibility with hydraulic fluid	ISO 2943:1998-11
Collapse pressure test	ISO 2941:2009-04

The development, manufacture and assembly of Rexroth industrial filters and Rexroth filter elements is carried out within the framework of a certified quality management system in accordance with ISO 9001:2000.

### Classification according to the Pressure Equipment Directive

DirectiveThe return flow filters for hydraulic applications according to 51454 are pressure holding equipment according to article 2, section 5 of the Pressure Equipment Directive 2014/68/EU (PED).

However, due to the safety requirements fulfilled in article 4, section 3, hydraulic filters are exempt from the PED if they are not classified higher than category I.

For classification, fluids from the chapter "Compatibility with permitted hydraulic fluids" have been taken into consideration. The intended use is only admissible with fluids of group 2 and within the specified limitations of use (see chapter "Technical data"). Therefore, these filters are not provided with the CE mark.

### Use in potentially explosive areas according to directive 2014/34/EU (ATEX)

The tank mounted return line filters according to 51454 are not equipment or components in the sense of directive 2014/34/EU and are not provided with the CE mark. It has been proven with the ignition risk analysis that these return line filters do not have own ignition sources according to DIN EN ISO 80079-36:2016.

The electronic maintenance indicators with one switching point:

WE-1SP-M12x1 R928028409 WE-1SP-EN175301-803 R928036318

are, according to DIN EN 60079-11:2012, simple, electronic operating equipment without their own voltage source.

### **™** Notice:

According to DIN EN 60079-14:2014, this simple, electronic operating equipment may be used in intrinsically safe electric circuits (Ex ib) in systems without marking and certification.

Maintenance indicators with EC type examination certificate upon request.

The tank mounted return line filters and the electronic maintenance indicators described here can be used for the following potentially explosive areas:

	Zone suitability			
Gas	1	2		
Dust	21	22		


Complete filter with mech./opt. maintenance indicator								
	Use/assignment	Gas 2G	Dust 2D					
Assignment		Ex h II c T6T1 Gb	Ex h II C T70°CT450°C Db					
Minimum conductivity of the medium pS	/m min	30	00					
Dust accumulation	max	_	0.5 mm [0.019 inch]					

### **Guidelines and standards**

	Use/as	signment	Gas 2G		Dust 2D
Assignment			Ex II 2G Ex ib IIB T4 Gb		Ex II 2D Ex ib IIIC T100°C Db
Perm. intrinsically safe electric circuit			Ex ib IIC, Ex ic IIC		Ex ib IIIC
Technical data		Values only for intrinsically safe electric circuit			
Switching voltage	Ui ı	max	150 V AC/DC		
Switching current	li ı	max		1.0	A
Switching power	Pi ı	max	1.3 W T4 T <sub>max</sub> 40°C		750 mW T <sub>max</sub> 40 °C
	1	max	1.0 W T4 T <sub>max</sub> 80 °C		550 mW T <sub>max</sub> 100 °C
Maximum surface temperature 1)	1	max	-		100 °C
nner capacity	Ci		neglectable		
nner inductivity	Li			neglect	table
Dust accumulation		max	_		0.5 mm [0.019 inch]

<sup>1)</sup> The temperature depends on the temperature of the medium in the filter and must not exceed the value specified here.

Possible circuit according to DIN EN 60079-14

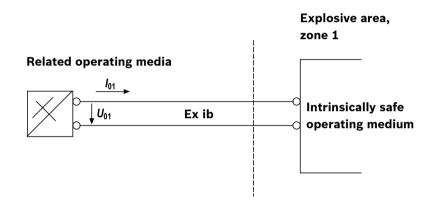

### **▲** WARNING!

- ► Explosion hazard due to high temperature!

  The filter surface temperature depends on the temperature of the medium in the hydraulic circuit and must not exceed the value specified here.

  Measures are to be taken so that in the potentially explosive area, the max. admissible ignition temperature is not exceeded.
- ▶ When using the tank mounted return line filters according to 51454 in potentially explosive areas,
- appropriate equipotential bonding has to be ensured. The filter is preferably to be earthed via the mounting screws. It has to be noted in this connection that paintings and oxidic protective layers are not electrically conductive.
- ► During filter element change-out, the packaging material is to be removed from the replacement element outside the potentially explosive area

### M Notices:

- ► Maintenance to be conducted only by specialists, as per the instruction by the machine end-user according to DIRECTIVE 1999/92/EG Annex II, section 1.1
- ► Functional and safety warranty only applicable when using genuine Rexroth spare parts

### **Environment and recycling**

- ► The used filter element has to be disposed of according to the country-specific legal regulations for environmental protection.
- ► After the service life of the filter, the filter components can be recycled according to the applicable country-specific legal regulations for environmental protection.

#### Intended use

The filters according to RE 51454 consist of a filter housing, filter element and maintenance indicator, which serve as components in the sense of the EC Machinery Directive 2006/42/EC in hydraulic machinery for the separation of dirt particles.

The filters are used under the following boundary conditions and limits:

- ▶ Only in hydraulic systems with fluids of group 2, according to Pressure Equipment Directive 2014/68/EU
- ▶ Only according to the application and environmental conditions in the chapter "Technical data"
- ► Only in compliance with the specified performance limits in the section "Technical data"; extended operational durability/load cycles on request
- ▶ Only with hydraulic fluids and the intended seals according to the section "Compatibility with hydraulic fluids"
- Use in potentially explosive atmospheres according to the chapter "Guidelines and standards"
- ► The notes regarding the operating modes according to the section "Assembly, commissioning, maintenance" must be observed
- ▶ Compliance with application and environmental conditions according to the technical data
- ▶ Compliance with the specified performance limits
- ▶ Use in the original condition, without damage
- ▶ Maintenance work, such as the replacement of seals, filter elements and optical indicators with original Bosch Rexroth spare parts, is admissible. Repair by the customer, particularly at pressurized components, is inadmissible.
- ▶ The filters are intended exclusively for professional use and not for private use.

#### Improper use

Any use deviating from the intended use is improper and thus not admissible. Improper use of the filters includes:

- ► Incorrect storage
- ► Incorrect transport
- ▶ Lack of cleanliness during storage, assembly and operation
- ▶ Incorrect installation
- ▶ Use of inappropriate/non-admissible hydraulic fluids
- ▶ Exceedance of the specified maximum pressures and load cycles
- Operation outside the approved temperature range
- ► Installation and operation in an inadmissible device group or category
- ▶ Operation outside the specified limits for the operating voltage, see the section "Technical data"

Bosch Rexroth AG does not assume any liability for damage caused by improper use. The user assumes all risks involved with improper use.

Bosch Rexroth AG Ketsch plant Hardtwaldstr. 43 68775 Ketsch, Germany Phone +49 (0) 62 02/603-0 filter-support@boschrexroth.de www.boschrexroth.de © All rights reserved to Bosch Rexroth AG, also regarding any disposal, exploitation, reproduction, editing, distribution, as well as in the event of applications for industrial property rights.

The data specified above only serve to describe the product. No statements concerning a certain condition or suitability for a certain application can be derived from our information. The information given does not release the user from the obligation of own judgment and verification. It must be remembered that our products are subject to a natural process of wear and aging.